



Download



Save as...



Edit



Share



# Specifications

**Frequency:** 433.39 MHz.

**Security:** 128-bit AES encryption.

**Range:** up to 50 metres.

**Battery life:** up to 3 years.

**Battery type:** Eveready AA Lithium 1.5V x 2.

**Important:** Use only AA 1.5V Lithium batteries – do not use Alkaline batteries.

## e-LOOP Mini Fitting Instructions

**Before fitting the e-Loop, you will need to fit the 2 x AA batteries and screw the bottom plate to the e-Loop using the M3 screws supplied. Ensure all screws are tight.**

### Step 1 – Coding e-LOOP Mini

1. Press and hold the CODE button on the transceiver until the Red LED illuminates, now release the button.
2. Press the CODE button on the e-Loop Mini. The Yellow LED on the e-Loop will flash 3 times to indicate transmission, and the Red LED on the transceiver will flash 3 times to confirm the coding sequence has been completed.

### Step 1 – Coding e-LOOP Mini (Refer to Diagram on the

1. Place e-Loop in the ground using 2 Dyna bolts (supplied).

E-LOOP MINI INSTRUCTIONS 2022.pdf



175%



1 of 1

